 


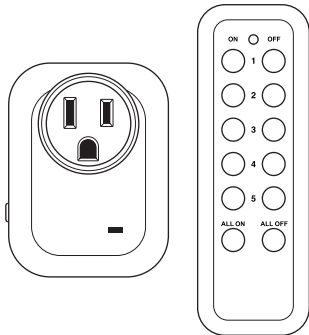

Zap 3VX

Model No.: BH9907U



Questions or Concerns?

(855) 686-3835

support@etekcity.com

Thank You.

Thank you for purchasing Etekcity's Zap 3VX Remote Outlet Switch. Wirelessly control your lights and appliances from up to 100 feet away with a press of a button. There's no setup, no apps and no hassle necessary.



Table of Contents

Safety Information	4
Function Diagram	6
Operation	8
Re-programming an Outlet	10
Resetting an Outlet	12
Specifications	14
Troubleshooting	15
Warranty	16
Customer Support	19



Safety Information

IMPORTANT: Please read, understand, and comply with all of the instructions provided in this manual before using this device. Failure to comply with the instructions given in this manual and/or using the device in ways other than the ones mentioned herein may result in physical harm and/or damage to the device.

Important Safety Information

 
- The wireless range may be shortened by other electronic devices, appliances, walls, and other physical barriers.
- The outlets are intended for indoor use only.
- Avoid exposing to high-temperature sources, direct sunlight, or exposure to moisture.
- **DO NOT** exceed the maximum load current of 10A (approximately 1200W).

 
- **DO NOT** use appliances such as refrigerators, air conditioning units, and washing machines with the outlets. Such appliances exceed the maximum load current of 10A (1200W).
- Keep out of reach of children.
- The outlets are best used in areas with proper air circulation.
- When cleaning, use a dry or damp cleaning cloth to wipe the outlet and remote surfaces.
- For your safety, make sure the batteries within the remotes are correctly installed before use.
- **DO NOT** dispose any part of this product in a fire.
- The remote is not compatible with rechargeable batteries.
- This device is not intended for use in areas with high humidity, such as bathrooms.
- For best performance, regularly change the batteries in the remote controls.
- If the remote is not in use for an extended period of time, remove batteries.
- Discard all parts of this products in accordance with local environmental regulations. Do not discard in regular household waste.
- These outlets are not compatible with the Zap 5LX remote outlets, or with older remote-controlled outlet models.



Function Diagram

1. Outlet
2. Power / Program Button
3. Outlet Indicator Light
4. Remote Control
5. On Buttons
6. Off Buttons
7. Outlet Number

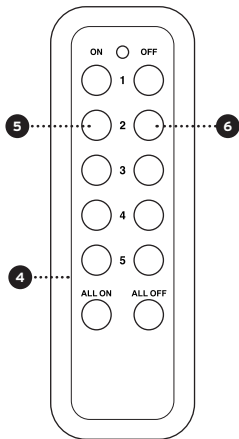

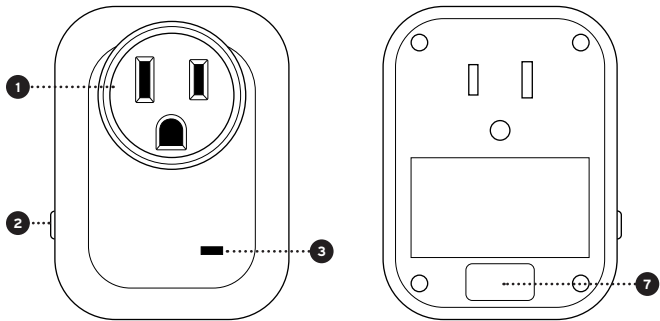





Operation

The outlets and remote control transmitter are not pre-programmed for immediate use. So you will have to program each outlet and remote control transmitter together firstly as per following steps:

 
1. Install one 12V/23A battery to each remote control.

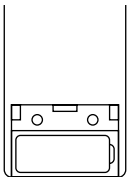

 
2. Plug each outlet into a powered socket.

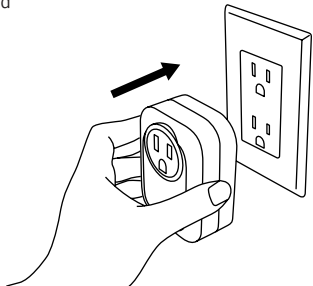

 3. Plug an appliance into each outlet. Keep the appliance switch to 'ON' in order to allow the outlet to control the device.

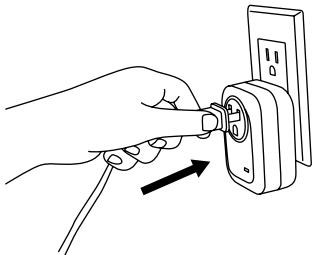

 
4. Press the 'ON' or 'OFF' button for the corresponding number on remote. The indicator light on the corresponding outlet will turn on, confirming that the outlet is now in use.

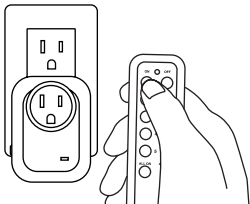


NOTE: The outlet number can be found on the back of each outlet in the following format from 1 to 3: xxxx-1, xxxx-2, etc.

Re-programming an Outlet

 1. Unplug device from outlet.


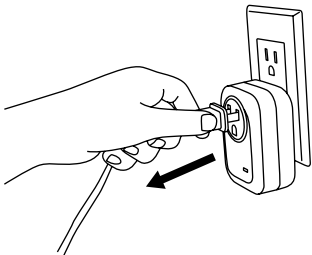


 2. Press and hold programming button until indicator light starts to blink.

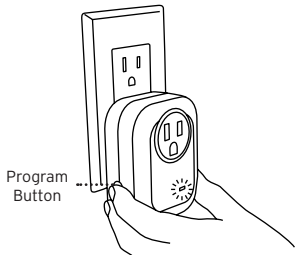

3. Release program button, press the "ON" or "OFF" button for the desired number on the remote
4. Pairing is successful when indicator light stops blinking.

  
NOTE: You may repeat the re-programming steps to assign up to 10 to a single number to simultaneously control multiple devices with a single click.

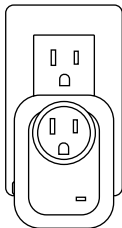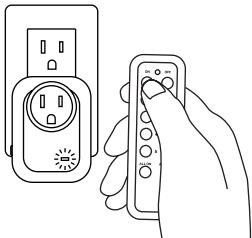


Resetting an Outlet

To remove an outlet from all remote control pairings:


 
1. Unplug any devices connected to the remote outlet.

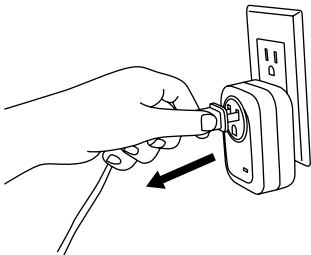

 2. Remove the outlet from the power socket.

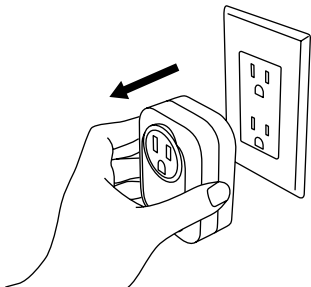

  3. Press and hold the program button.
4. Plug outlet back into power socket while continuing to hold program button.
5. Hold the program button for approximately 5 seconds until the LED indicator begins to flash
6. Program reset will be complete when the indicator light stops blinking.

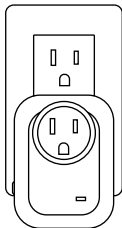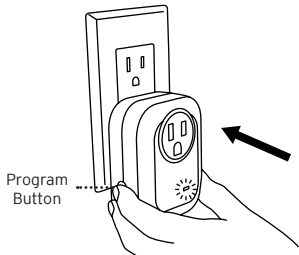



Specifications

Voltage:	120V / 60 Hz
Maximum Current:	10A
Maximum Power:	1200W
Transmission Frequency:	433.92 MHz
Remote Battery Power:	12V (23A)
Remote Control Range:	100 feet (30 meters)*
Operating Temperature:	32°~95°F (0°~35°C)
Storage Temperature:	-4°~167°F (-4°~75°C)

Package Contents

3 x Remote Outlet Switch
1 x Remote Control
1 x 12V/23A Battery
1 x User Manual

***NOTE:** The wireless range may be shortened by other electronic devices, appliances, walls, and other physical barriers.



Troubleshooting

Issue	Solution
Outlet is unresponsive to remote commands.	Replace the remote batteries with new 12V 23A batteries. Low battery power may decrease readable wireless remote range.
	Make sure the outlet and device are properly connected and powered on.
	Make sure that the outlet is placed in an area with proper air circulation without overheating.
	Make sure the maximum load current of 10A (approximately 1200W) isn't being exceeded. If so, unplug the device from the outlet immediately.
	If the outlet is still unresponsive, reset and reprogram the outlet.



Warranty

TERMS & POLICY

Etekcitec warrants all products to be of the highest quality in material, craftsmanship and service for a minimum of 1 year, effective from the date of purchase. Warranty lengths may vary between product categories. For specific warranty terms, please refer to your product's listing page or operation manual.

Under the limited warranty, Etekcitec will replace or refund any product found to be defective due

to manufacturer flaws based on eligibility. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcitec is not responsible in any way for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

Etekcity and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed above and in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Should your product prove defective within the specified warranty period, please return the defective unit in its original packaging with (1) an original copy of the invoice, (2) your order confirmation number, (3) and your warranty ID number.

EXCEPTIONS AND EXCLUSIONS

- Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

To receive a valid warranty ID number, sign into your Etekcity customer account at **www.etekcity.com** (If you ordered your product through Amazon, Ebay or Walmart, create an account at www.etekcity.com in order to retrieve your warranty ID). At the top of the warranty page, type in your order number located in your order invoice to retrieve your warranty ID number. Your warranty ID number will then be sent to your email for your records. If deemed defective, your product will be replaced or refunded at no charge to you.

Date of Purchase: _____

Place of Purchase: _____

Order Number: _____

Warranty ID: _____



Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is ours!

CUSTOMER SUPPORT

Etekcite Corporation
1202 N Miller St. Suite A
Anaheim, CA 92806

Toll-Free: (855) 686-3835
Fax: (657) 202-1693
Local: (657) 500-1872
Email: support@etekcity.com

SUPPORT HOURS

Monday - Friday: 9:00 am - 5:00
pm PST

**Please have your order
confirmation number ready before
contacting customer support.*



ETEK CITY[®]

Building on better living.



Scan here and join the community!

<http://www.etekcity.com>