 


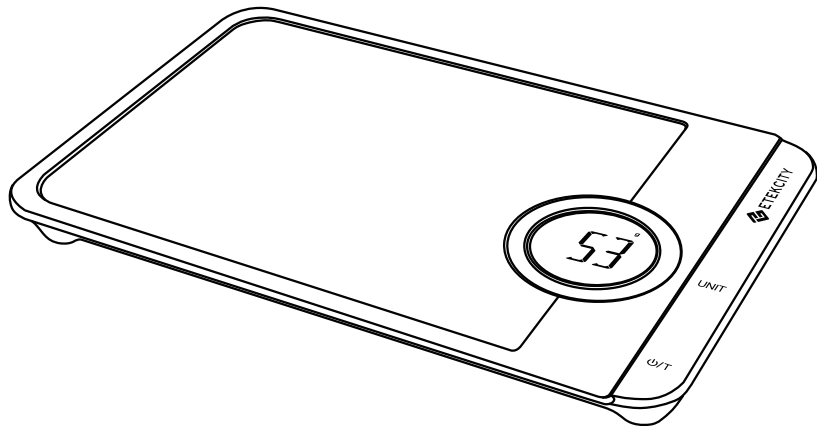

Digital Kitchen Scale

Model No.: EK6314-T



Questions or Concerns?

(855) 686-3835

support@etekcity.com

Thank You.

Thank you for purchasing the Digital Kitchen Scale by Etekcity. We are dedicated to providing our customers with quality products to build on better living. Should you have any questions or concerns about using your new product, feel free to reach out to our helpful customer support team at (855) 686-3835 or by email at support@etekcity.com. We hope you enjoy your new product!



Table of Contents

Safety Information	4
Function Diagram	5
Set-up	6
Operation	7
Troubleshooting	10
Specifications	11
Warranty	12
Customer Support	14



Safety Information

IMPORTANT: Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

- Always place the scale on a hard, dry, and flat surface before measurement in order to ensure accurate results.
- Dirt, dust, vibration, wind, air currents, and electromagnetic interference may contribute to inaccurate results.
- **DO NOT** exceed the 11 lb (5 kg) weight capacity; doing so may damage the scale. An overload indicator will appear on the LCD display if the limit is exceeded.
- Avoid exposing the device to damp environments or extreme temperatures.
- **DO NOT** immerse the scale in water or corrosive liquids. If a liquid is spilled on the digital display or buttons, immediately wipe the scale clean with

 
a soft cloth in order to avoid potential internal damage.

- When replacing batteries, make sure to insert them under the correct polarity as indicated within the battery compartment.
- If the low battery indicator is displayed, please replace the batteries.
- **DO NOT** mix new and used batteries to power the device.
- This scale is not intended for commercial or heavy-duty use.
- Handle the scale with care. Keep the scale in a cool, dry environment.
- If the scale fails to turn on, check if the batteries are installed correctly. Replace the batteries if necessary.
- If the scale is not in use for an extended period of time, remove the batteries to extend the scale service lifetime.



Function Diagram


1. LCD Display
2. UNIT Button
3. ON/OFF/TARE Button
4. Battery Compartment

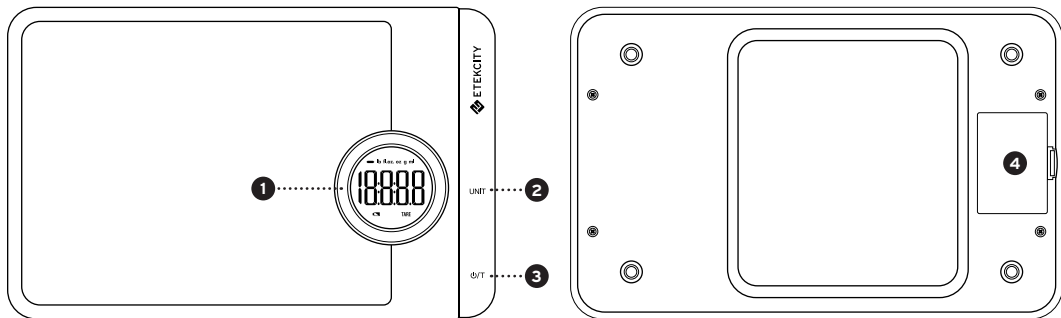



Set-Up

 The included CR2032 Lithium batteries are preinstalled in the scale. Open the battery compartment cover located on the backside of the scale and remove the plastic strip from the battery compartment to allow the batteries to power the device. Reapply the battery compartment cover.

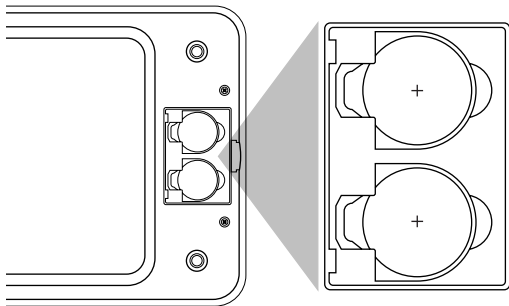


NOTE: The positive side of the battery should be facing up.



Operation


1. Place the scale on a flat, dry surface.
2. Press **⏻/T** to turn on the scale.
3. Press **UNIT** to select your desired measuring unit.
Then wait until the screen displays zero before measuring.

 NOTE: If the screen does not display zero automatically, press the '**⏻/T**' button to auto-adjust to zero.

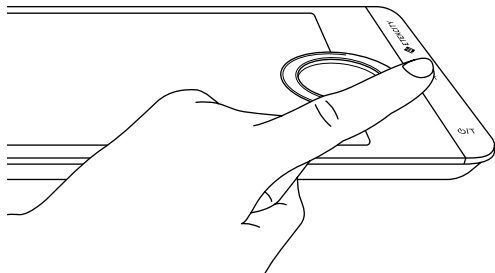

4. Gently place your desired object in the center of the weighing platform. The LCD display will automatically display the object's weight.
5. Hold down **⏻/T** for 2 seconds to turn off the scale.


 
NOTE: The scale will automatically turn off after one minute of inactivity.

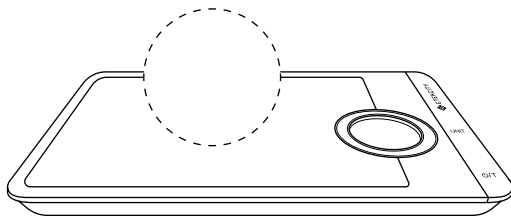



Tare Function

The tare function allows you to measure objects in a container without the having to include the container's weight in the final measurement.

  
1. Place the scale on a flat, dry surface.
2. Power on the scale and wait for the display to read zero.

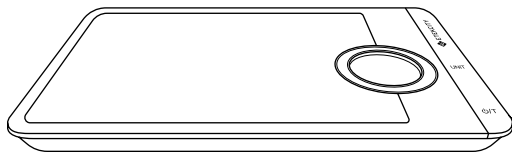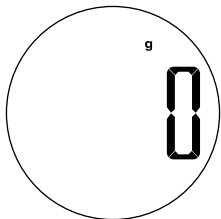

  
3. Place an empty container on the scale and press **⏻/T**. The display will now show zero.

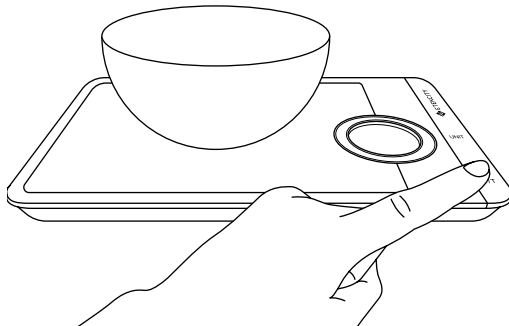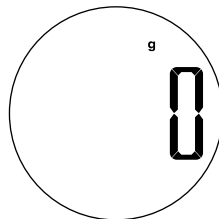

 4. Place objects in the container, and the display will show the net weight of the items.

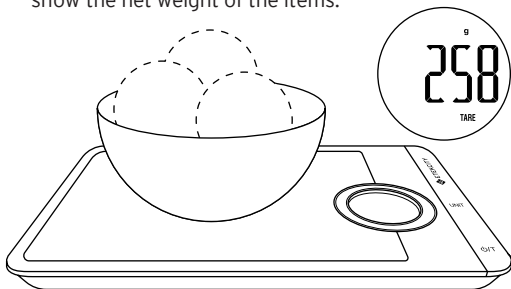


 5. Take all items off the scale; the display will show the weight of the container with a negative weight.

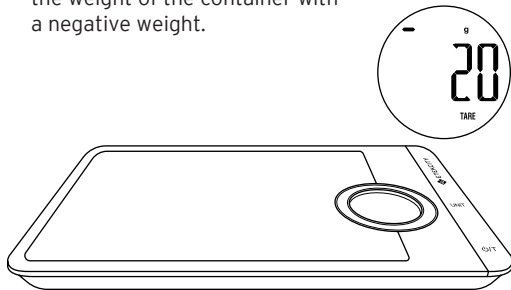

6. When this happens, press **⏻/T** and the display will clear to zero. You are now ready to weight another object

 7. If you are finished using the scale you can turn off the scale by holding down **⏻/T** or allow the scale to automatically turn off.

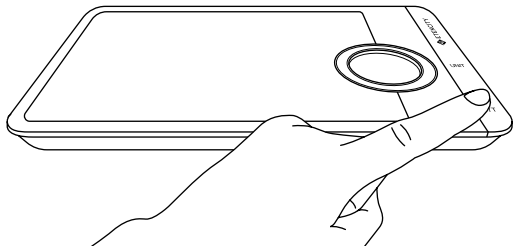

Maintenance

Use a slightly damp cloth to clean the surface of the scale, followed by a dry soft cloth to wipe away the remaining moisture. You can also use a dry soft cloth to wipe off any dust that may be on the scale. Be sure not to wash the device or immerse it in water or any other liquids.



Troubleshooting

Problem	Cause	Solution
LCD display is dim or shows: Lo	Not enough power.	Replace batteries.
Device does not turn on.	Batteries are exhaust	Replace batteries.
	Batteries not inserted correctly.	Insert batteries under the correct polarity as marked on battery compartment.
EEEE	Weight exceeds 11lbs (5kg).	Promptly remove object from scale to protect its sensors. Use a different scale with a higher weight range.
out?	Objects exceeding 1000g are on top of scale before it is turned on.	Remove objects from scale, wait until display reads zero before weighing.
Measurement is not accurate or display is showing: UnSt	Weight is unstable when turning scale on.	Keep weight stable when turning on scale.



Specifications

Dimensions:	239 x 153 x 18.8mm
Display:	LCD (40mm diameter)
Measurement Unit:	g/fl.oz/lb:oz/oz/ml
Measurement Range:	5000g/176.4 fl.oz/11lb:0.4oz/176.4oz/5000ml
Division:	1g/0.1 fl.oz/0.1oz/0.1oz/1ml
Power Source:	2 x 3V CR2032 batteries
Auto-Off:	About 1 minute of inactivity

Package Contents

- 1 x digital Kitchen Scale
- 1 x User Manual
- 4 x 3V CR2032 Lithium batteries (included)



Warranty

Terms & Policy

Etecity warrants all products to be of the highest quality in material, craftsmanship and service for a minimum of 1 year, effective from the date of purchase. Warranty lengths may vary between product categories. For specific warranty terms, please refer to your product's listing page or operation manual.

Under the limited warranty, Etecity will replace or refund any product found to be defective due to manufacturer flaws based on eligibility only within the first 30 days of purchase. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etecity is not responsible in any way for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:
Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
Improper or inadequate maintenance.
Damage in return transit.
Unsupervised use by children under 18 years of age.

Etecity and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Should your product prove defective within the specified warranty period, please return the defective unit in its original packaging with an original copy of the invoice and your order confirmation number.

To find out more about extending your warranty, visit www.etekcity.com/warranty or contact customer support.

Date of Purchase: _____

Place of Purchase: _____

Order ID: _____



Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is ours!

Customer Support

Etekcite Corporation
1202 N Miller St. Suite A
Anaheim, CA 92806

Toll-Free: (855) 686-3835
Fax: (657) 202-1693
Local: (657) 500-1872
Email: support@etekcity.com

Support Hours

Monday - Friday
9:00 am - 5:00 pm PST

**Please have your order ID number ready before contacting customer support.*



Scan here and join the community!
<http://www.etekcity.com>