



LED Camping Lantern Flashlight

Model No.: CLF50



Questions or Concerns? support@etekcity.com • (855) 686-3835

Thank You!

Thank you for purchasing the **CLF50 LED Camping Lantern Flashlight**. We are dedicated to providing our customers with quality products for building on a better living. Should you have any questions or concerns about using your new product, feel free to reach out to our helpful Customer Support team at **support@etekcity.com**. For more contact information please refer to page 14. We hope you enjoy your new product!

Table of Contents

Safety Information	4
Function Diagram	5
Set-Up	6
Operation	7
· Adjustable Handle	7
· Flashlight Mode	10
· Lantern Mode	11
Battery Replacement	12
Warranty Information	13
Customer Support	14

NOTE:

* These times are based on using the lantern with a brand new set of alkaline batteries. Using other types of batteries that are not alkaline may shorten the operating time of the lantern.

** The International Protection (IP) Rating is the system that classifies the degrees of protection provided against the intrusion of solid objects, dust, accidental contact, and water in electrical enclosures. An IP54 rating means this lantern is protected from limited dust ingress and water spraying from any direction.

Specifications

Power Supply	3 x 1.5V AA Batteries (Pre-installed)
Rated Power	3W
Max Brightness	Lantern Mode: 300 Lumen Flashlight Mode: 110 Lumen
Battery Life	Lantern Mode: 12 Hours* Flashlight Mode: 20 Hours*
Protection Level	IP54**
Weight	10.3 oz (292 g)
Dimensions	Fully Collapsed: 5.5 x 3.3 in. (139.7 x 83.8 mm) Fully Extended (with handle): 9.2 x 3.3 in. (233.6 x 83.8 mm)

Safety Information

IMPORTANT: Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

General Safety


- **DO NOT** replace batteries while hands are wet.
- **DO NOT** replace batteries in wet environments.
- **ONLY** use 1.5V AA batteries with this camping lantern.
- **DO NOT** shine the light into the eyes of other person(s). Doing so may result in serious injury.

Use & Care Guidelines


- When not in use, turn off the lantern by completely collapsing the device. If you are using the lantern as a flashlight, press the 'Flashlight Button' to turn off the light.
- When installing or changing batteries, always make sure to place the batteries under the correct polarity as indicated within the battery compartment.
- If you are using rechargeable batteries, make sure they have the required voltage necessary to power the lantern.

- **DO NOT** dispose of any part of this product in a fire.
- Properly dispose of all parts of this product in accordance with local environmental regulations. **DO NOT** dispose of the lantern or batteries in regular household waste.
- **DO NOT** submerge the lantern into water or any other liquid.
- **DO NOT** attempt to open the lantern for self-servicing, other than for changing the batteries. Doing so may result in damage to the product, electric shock, or injury. Doing so will also void your warranty.
- **DO NOT** use replacement parts that from other Etekcity lanterns or parts from other third-party products.
- Use a damp or dry cloth to wipe the lantern's surface when cleaning.
- When not in use for an extended period of time, remove the batteries to avoid power drainage.

Function Diagram

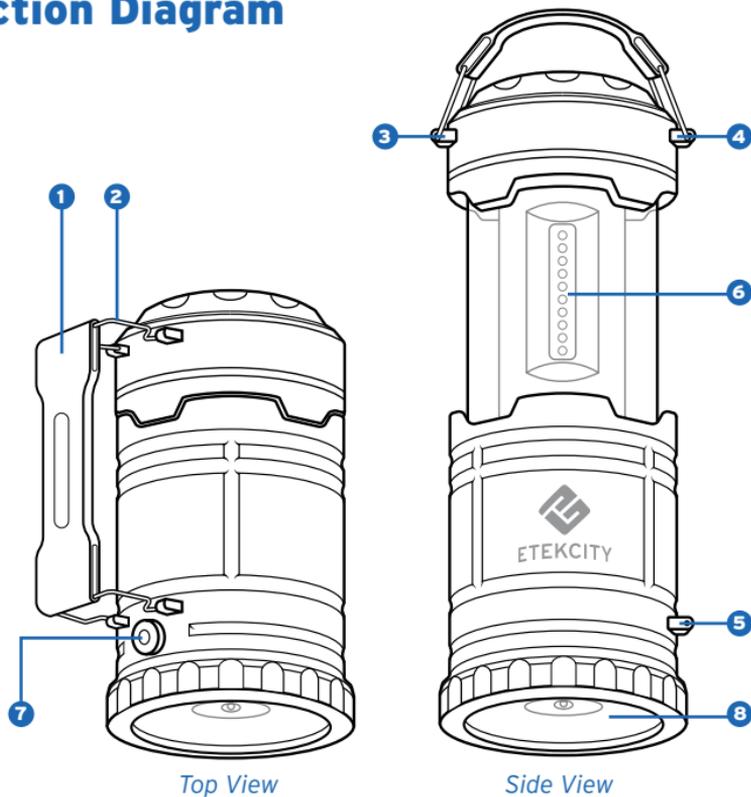

1. Handle
2. Handle Clips
3. Clip Holder A
4. Clip Holder B
5. Clip Holder C
6. LED Strip
7. Flashlight Button
8. Flashlight
9. Battery Compartment

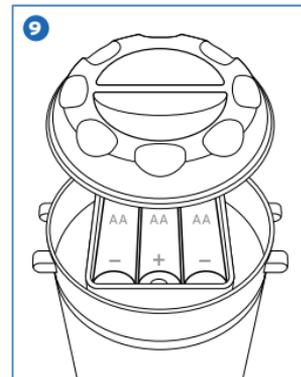

Set-Up

Before First Use

1. Remove the battery compartment lid by twisting it counterclockwise, then lifting it up from the lantern. [Figures 1.1 & 1.2]
2. Remove the insulation strip and replace the battery compartment lid. [Figure 1.3]



Figure 1.1

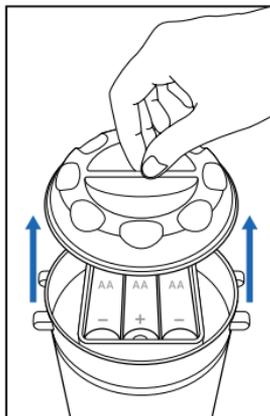


Figure 1.2


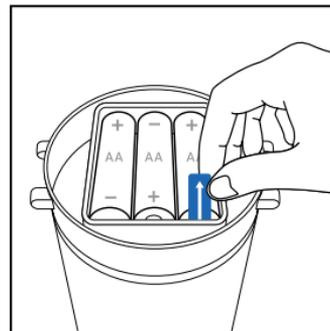


Figure 1.3


Operation

Adjustable Handle

Your new lantern can be used in two different ways: Flashlight Mode and Lantern Mode. [Figure 2.1 & 2.2]

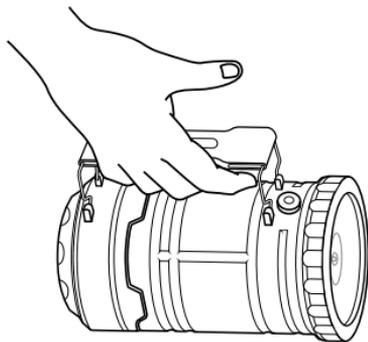

Flashlight Mode
Figure 2.1

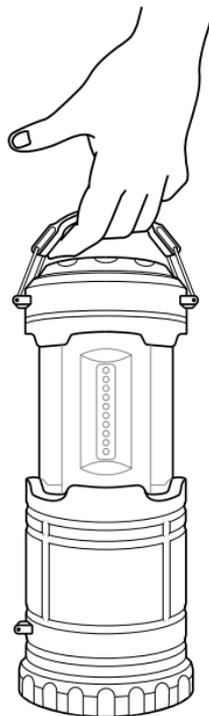


Lantern Mode
Figure 2.2

The Adjustable Handle (cont.)

Adjusting from Flashlight Mode to Lantern Mode

Figure 2.3

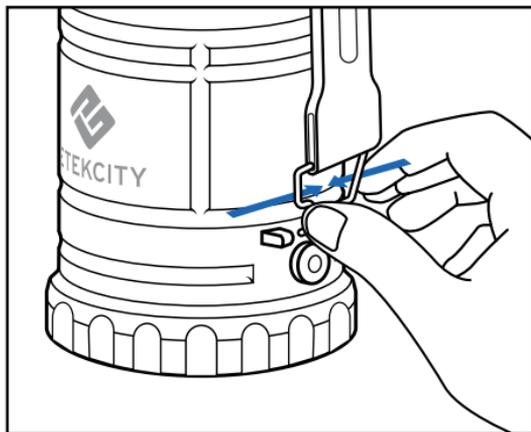

1. Pinch the clip that is connected to **Clip Holder C**, then remove the clip. [Figure 2.3]


Figure 2.4



2. Place the removed clip into **Clip Holder A** at the top of the lantern. [Figure 2.4]

Adjusting from Lantern Mode to Flashlight Mode

Figure 2.5

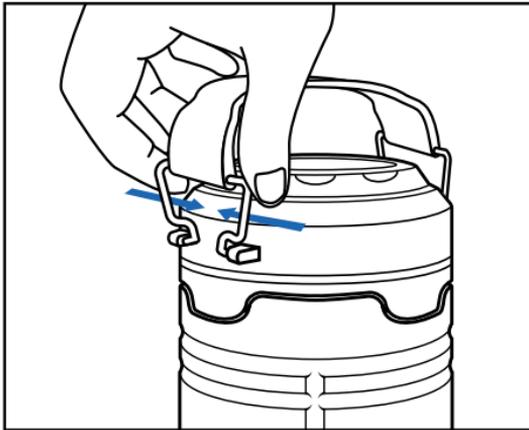

1. Pinch the clip that is connected to **Clip Holder A**, then remove the clip. [Figure 2.5]

Figure 2.6



2. Place the removed clip into **Clip Holder C** next to the 'Flashlight Button.' [Figure 2.6]

Flashlight Mode

1. Adjust the lantern to Flashlight Mode. [Figure 3.1]
2. Press the 'Flashlight Button' on the side of the lantern to turn on the flashlight. [Figure 3.2]
3. Grasp the handle to hold the lantern. [Figure 3.3]
4. Press the 'Flashlight Button' once more to turn off the flashlight.

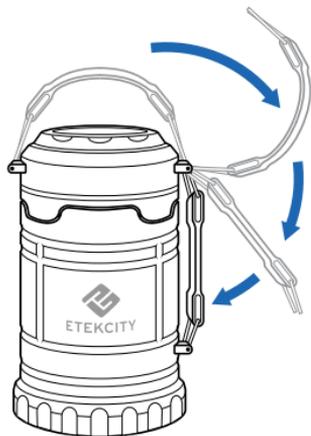


Figure 3.1

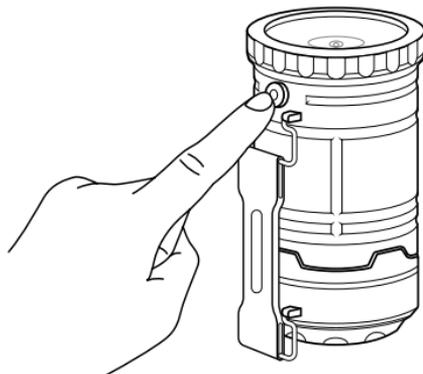


Figure 3.2

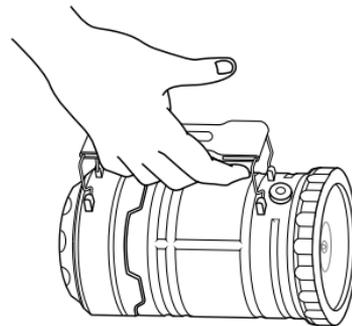


Figure 3.3

Lantern Mode

1. Adjust the lantern to Lantern Mode. [Figure 4.1]
2. Once the clip is installed, pull up on the handle to turn on the lantern. [Figure 4.2]
3. (Optional): Adjust the height to control the brightness of the emitted light.
4. Fully collapse the lantern to turn it off. [Figure 4.3]



Figure 4.1

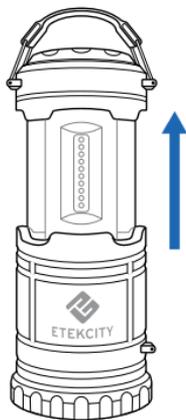


Figure 4.2



Figure 4.3

NOTE: Turning on both the lantern and flashlight at the same time is not recommended, as it drains the battery faster.

Battery Replacement

NOTE: If the handle is positioned for Lantern Mode, move the handle back into position for Flashlight Mode.

1. Turn off the lantern.
2. Twist the battery compartment lid counterclockwise, then lift the lid to remove it from battery compartment. [Figure 5.1]
3. Remove the old 1.5V AA batteries and properly dispose of them.
4. Place new 1.5V AA batteries under the correct polarity, and replace the battery compartment lid. [Figures 5.2 & 5.3]

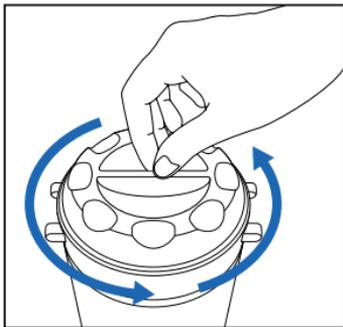


Figure 5.1

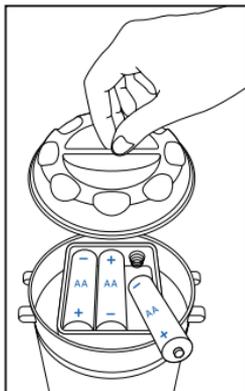


Figure 5.2

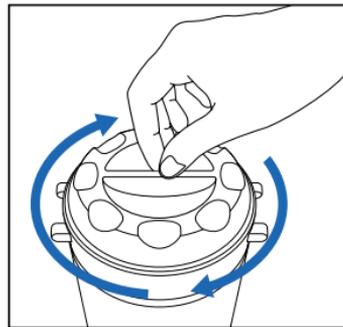


Figure 5.3

Warranty Information

Product Name	LED Camping Lantern Flashlight
Model Number	CLF50
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order number and date of purchase.</i>	
Order Number:	
Date of Purchase:	

Terms & Policy

Etekcity warrants all products to be of the highest quality in material, craftsmanship, and service effective starting from the date of purchase.

Etekcity will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcity is not responsible in any way for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekcity and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your one-year warranty by an additional year. Log onto www.etekcity.com/warranty and enter your order number (i.e. Amazon or Houzz) within the first 14 days of your purchase to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

Defective Products & Returns

Should your product prove defective within the specified warranty period, please contact Customer Support via support@etekcity.com with your invoice and order number. Once our Customer Support team has approved your request, please return the unit with a copy of your invoice and order number.

Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

Customer Support

Etekcitey Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com
Local: (657) 500-1872
Toll Free: (855) 686-3835

Support Hours

Monday - Friday:
9:00 am - 5:00 pm PST

*Please have your order invoice and order number ready before contacting Customer Support.

Connect with us @Etekcity





Scan here to join the community!
Visit us at **www.etekcity.com**

