




Digital Hanging Scale

Model No.: EHS-18

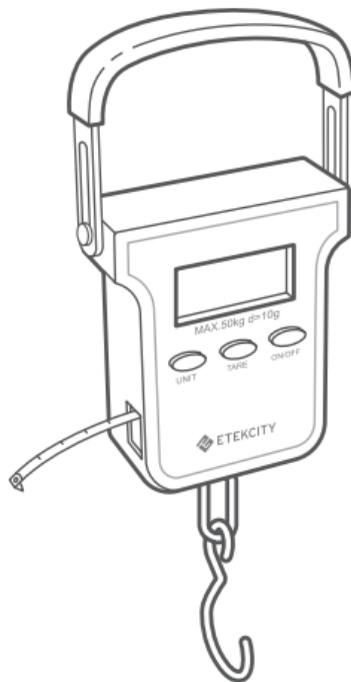

Questions or Concerns? support@etekcity.com • (855) 686-3835

Thank you for purchasing the
Digital Hanging Scale by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**. We hope you enjoy your new scale!

BECOME AN ETEKCITIZEN

Get exclusive deals, giveaways, and product registration. Better products for better living.
Find us at **etekcity.com**

Table of Contents

Package Contents	3
Specifications	4
Safety Information	4
Function Diagram	5
LCD Display	6
Setup	7
• Battery Installation	7
Operation	8
• Weight Measurement	8
• Unit Conversion	8
• Data Hold Function	9
• Tare Function	9
Care & Maintenance	10
• Replacing Batteries	10
Warranty Information	11
Customer Support	14

Package Contents

1 x Digital Hanging Scale
2 x 3V CR2032 Batteries (Pre-Installed)
1 x Carrying Pouch
1 x User Manual

Specifications

Dimensions	8.3 x 3.3 x 1.1 inches (210 x 84 x 29 mm)
Weight Capacity	110 lb (50 kg)
Units	oz / g / lb / kg
Auto-Off	60 seconds
Power	2 x 3V CR2032 Batteries

Weight of Object	Accuracy
< 44 lb (20 kg)	+/- 0.4 lb (0.2 kg)
> 44 lb (20 kg)	+/- 0.8 lb (0.4 kg)

Safety Information


**Follow all instructions and safety guidelines.
Read all instructions before using.**

- **Do not** exceed the weight capacity of 110 lb (50 kg). An overload indicator will appear on the digital display if the limit is exceeded.
- This scale is not intended for commercial or heavy-duty use. Household use only.
- **Do not** throw or strike the scale and do not submerge the scale in water.

SAVE THESE INSTRUCTIONS

Function Diagram

- A. Handle
- B. LCD Display
- C. ON/OFF Button
- D. TARE Button
- E. UNIT Button
- F. Measuring Tape
- G. Hook
- H. Battery Compartment
- I. Hook Storage

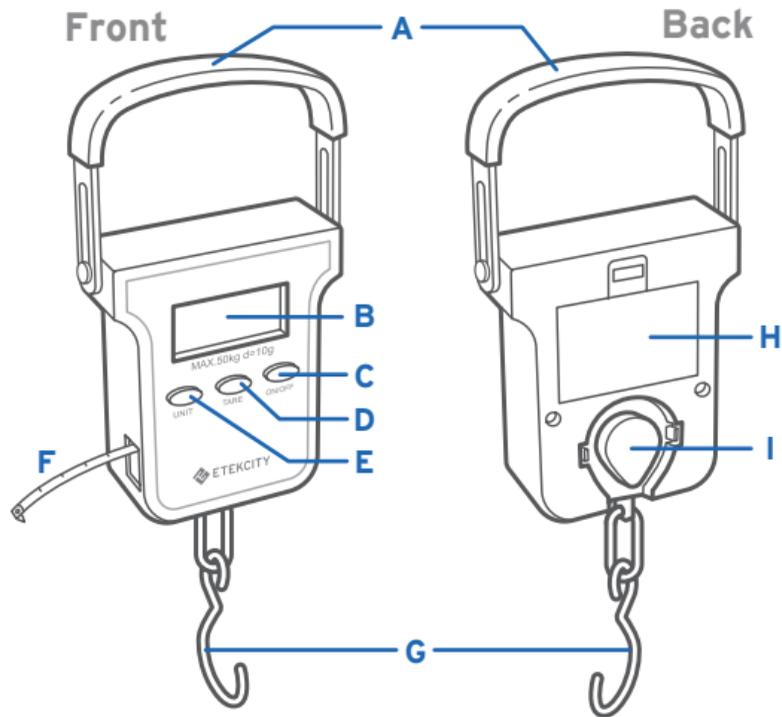

LCD Display

- A. Measured weight is less than the calibrated tare weight
- B. Displayed weight is the tared weight
- C. Last measured weight
- D. Weight in grams
- E. Weight in ounces
- F. Weight in kilograms
- G. Weight in pounds
- H. Maximum weight capacity has been exceeded (remove object from hook immediately)
- I. Battery low



Setup

Battery Installation

1. Open the battery cover.
2. Remove the insulation strip to activate the batteries. *[Figure 1.1]*
3. When replacing the batteries, make sure to insert them under the proper polarity.

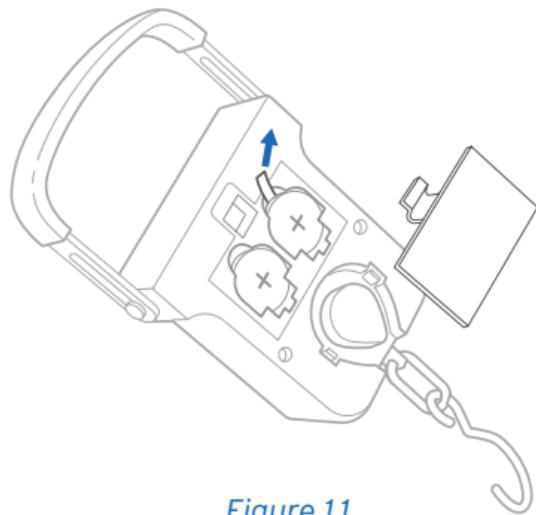


Figure 1.1

Operation

Weight Measurement

1. Press **ON/OFF** and the screen will light up. Wait for "0.00" to appear on the screen. [Figure 2.1]
2. Hang the object you want to measure on the hook.
3. Lift the scale with the object and hold still until the weight measurement stabilizes. The display will show the weight and "**Hold**".
4. To measure another item, remove the object and repeat steps 2 and 3.

5. Press **ON/OFF** to turn the scale off. The scale will automatically turn off if the scale is inactive for 60 seconds.

Note: To avoid result inaccuracy, keep the scale upright when measuring. **Do not** touch or move the scale during measurement. **Always** grasp the scale by the handle.



Figure 2.1

Unit Conversion

Press **UNIT** repeatedly to change the unit of measurement (oz / g / lb / kg).

Data Hold Function

Once the weight has stabilized and “**Hold**” appears on screen, the weight will stay on the screen for 60 seconds, or until you measure another object or press **TARE**.

Turning the data hold function on or off:

1. When the scale is on, press and hold **TARE** for 3 seconds.
2. Press **UNIT** to alternate between turning data hold function on or off.
Hoon - Data hold function on
HooF - Data hold function off
3. Press **TARE** to confirm selection.

Tare Function

The tare function allows users to weigh an object inside a container by subtracting the weight of the container from the total weight.

1. Hang the container on the weighing scale hook and allow the weight to stabilize and lock (the word “**Hold**” will appear).
2. Hold the scale stable and press **TARE** to tare the current weight. The display will show “**000**”.
3. Place the object you want to weigh inside the container and the scale will calculate the weight of the object without the weight of the container.

Care & Maintenance

- **Do not** use chemical detergents to clean the scale. Use a soft, damp cloth if needed.
- If not in use for a long period of time, remove the batteries and store the scale in a cool, dry environment to avoid circuit damage.

Replacing Batteries

1. Locate the battery compartment on the back of the scale and remove the battery compartment cover.
2. Ensure the **+** side of the battery is facing up and insert the batteries into the battery slots. [*Figure 3.1*]
3. Replace cover.

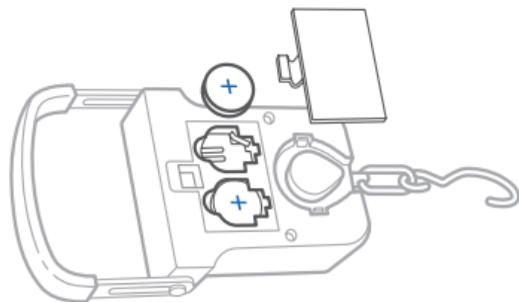


Figure 3.1

Warranty Information

Product Name	Digital Hanging Scale
Model Number	EHS-18
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order number and date of purchase.</i>	
Order Number	
Date of Purchase	

Terms & Policy

Etekcitec warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Etekcitec will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcitec is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional

safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekcitec and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential

losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto www.etekcity.com/warranty and enter your order number (for example, from Amazon or Houzz) to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

Defective Products & Returns

If your product proves defective within the specified warranty period, please contact Customer Support via **support@etekcity.com** with your order number. **DO NOT** dispose of your product before contacting us. Once Customer Support has approved your request, please return the unit with a copy of the invoice or your order number.

Customer Support

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

Customer Support

Etekcite Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Monday - Friday

9:00 am - 5:00 pm PST/PDT

**Please have your order confirmation number ready before contacting Customer Support.*

Connect with us @Etekcity



